




Spare Parts List Low Pressure Filter LPF up to 280 l/min, up to 50 bar

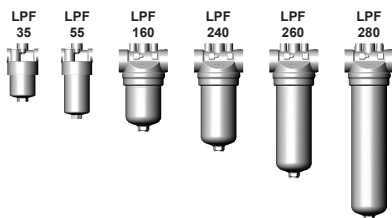

1. MAINTENANCE

1.1 GENERAL

Please follow the maintenance instructions!

1.2 INSTALLATION

Before fitting the filter into the system, check that the operating pressure of the system does not exceed the permitted operating pressure of the filter.

Refer to the type code label on the filter!

Important:

When using filters without bypass valve and at operating pressures above 20 bar, robust filter elements of the type BH4HC must be used for safety reasons.

Under extreme conditions (e.g. cold start), bypass valves will allow a partial flow past the element for a short time.

1.3 COMMISSIONING

Check that the correct filter element is fitted. Screw in bowl again fully and then unscrew by one quarter-turn (the sealing effect will not be improved by overtightening).

Switch on the hydraulic system and check filter for leakage.

Vent filter at an appropriate point in the system.

1.4 TOOLS REQUIRED FOR MAINTENANCE

Size	Spanner for filter bowl	Spanner for VD 0 A.1
35-55	SW 27	SW 27
160-280...1.0/1.1	–	SW 27
160-280...1.2	SW 27	SW 30

1.5 TORQUE VALUES FOR CLOGGING INDICATORS

Type	Max. torque
VM	33 Nm
VL	0.6 Nm

2. CHANGING THE ELEMENT

2.1 REMOVING THE ELEMENT

1. Switch off hydraulic system and release filter pressure.

2. LPF one-piece version only

Unscrew filter bowl (drain fluid into a suitable container and clean or dispose of it in accordance with environmental regulations).

LPF 160-280...1.0/1.1

two-piece version only

Unscrew retaining nut manually or with the help of a strap wrench and remove filter bowl (drain fluid into a suitable container and clean or dispose of it in accordance with environmental regulations).

3. Remove filter element from element spigot in filter head (check surface of element for contamination residue and larger particles; these can indicate damage to components).

4. Replace or clean filter element (only W/HC elements can be cleaned).

5. Clean filter bowl and filter head, as well as retaining nut (if present); particular attention must be given to the threads!

6. Examine filter, especially sealing surfaces, for mechanical damage.

7. Check O-rings and replace parts if necessary.

2.2 FITTING THE ELEMENT

1. Lubricate the O-ring with clean operating fluid. Apply aluminium paste or another suitable lubricant to threads on filter head and bowl.

2. When fitting a new filter element, check that the designation corresponds to that of the old element.

3. Place filter element carefully onto the element spigot.

4. LPF one-piece version only
Screw in filter bowl fully and then unscrew by one quarter-turn.

LPF 160-280...1.0/1.1

two-piece version only

Reposition filter bowl and screw on the retaining nut with 40 Nm.

5. Switch on hydraulic system and vent filter at a suitable point in the system.

6. Check the filter for leakage.


NOTE:

Contamination or incomplete pressure release on disassembly can lead to seizing of the bowl thread.

Filter elements which cannot be cleaned must be disposed of in accordance with environmental protection regulations.

3. SPARE PARTS

3.1 SPARE PARTS DRAWING
LPF 35 - 55

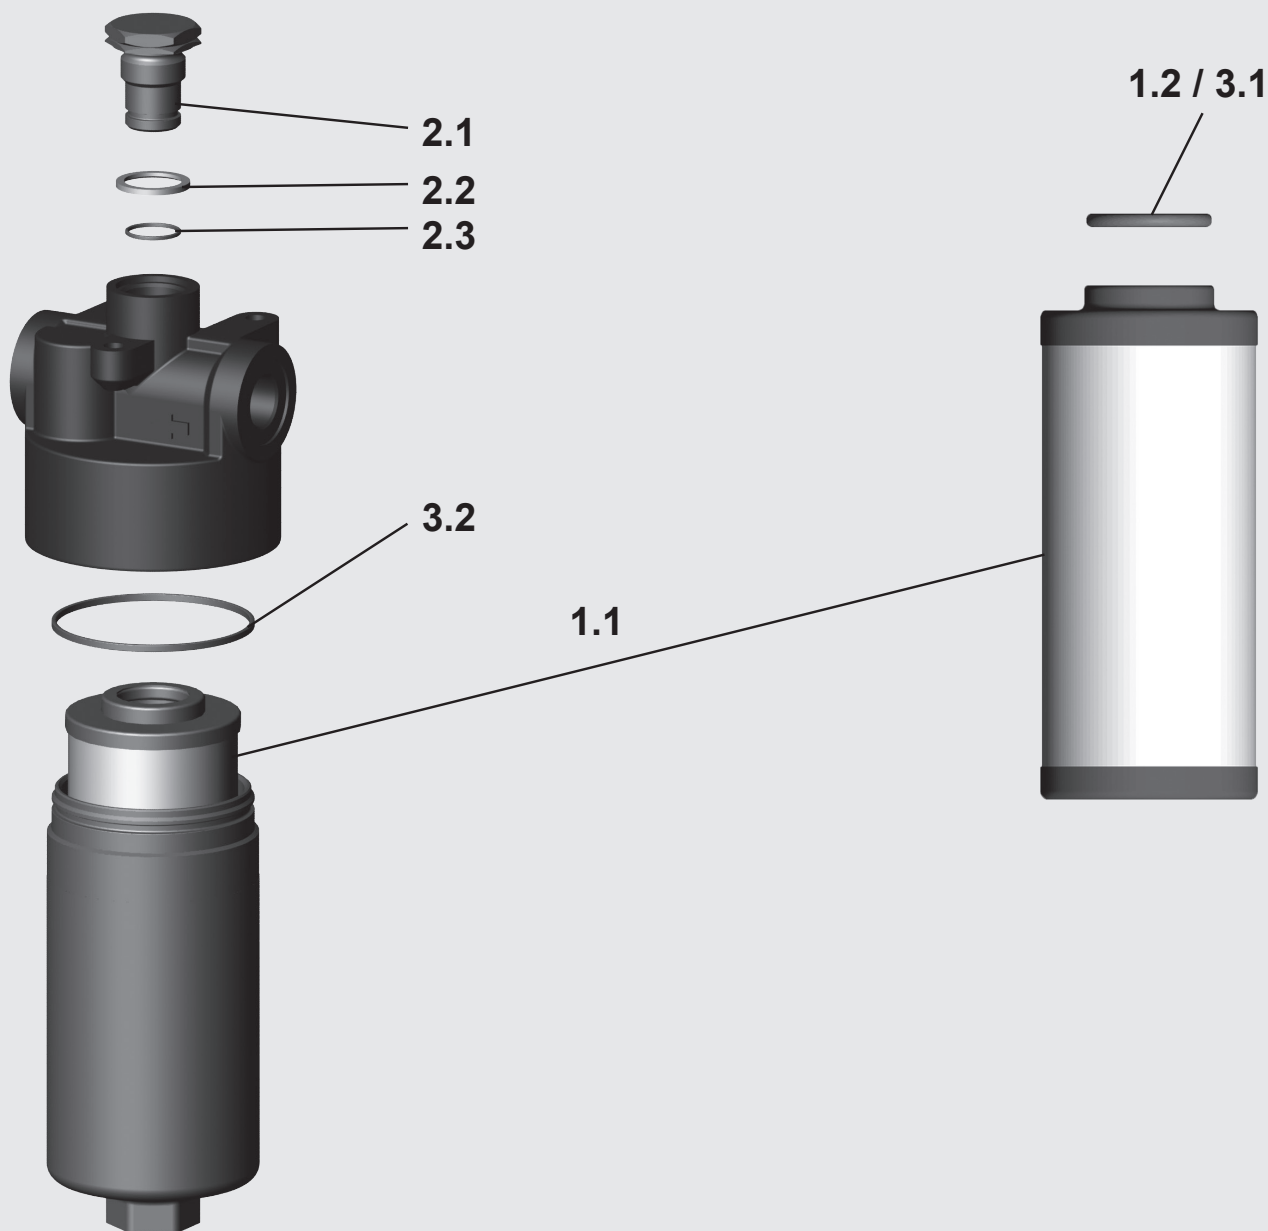


3.2 SPARE PARTS LIST LPF 35 – 55

Item	Con- tains	Designation	35	55
1.		Filter element	See Point 4. Replacement elements	
	1.1	Filter element	0035 D...	0055 D...
	1.2	O-ring	25 x 3.53	
2.		Clogging indicator or indicator plug	See Point 5. Replacement clogging indicator	
	2.1	Indicator plug VD 0 A.1 VD 0 A.1 /-V	00305932 00305931	
	2.2	Profile seal ring	VD...	
	2.3	O-ring	15 x 1.5	
3.		Seal kit LPF Seal kit LPF /-V	1280189 1283077	
	3.1	O-ring (element)	25 x 3.53	
	3.2	O-ring (bowl)	60 x 2	

3.3 SPARE PARTS DRAWING

LPF 160 - 280

Two-piece; version 1.0/1.1

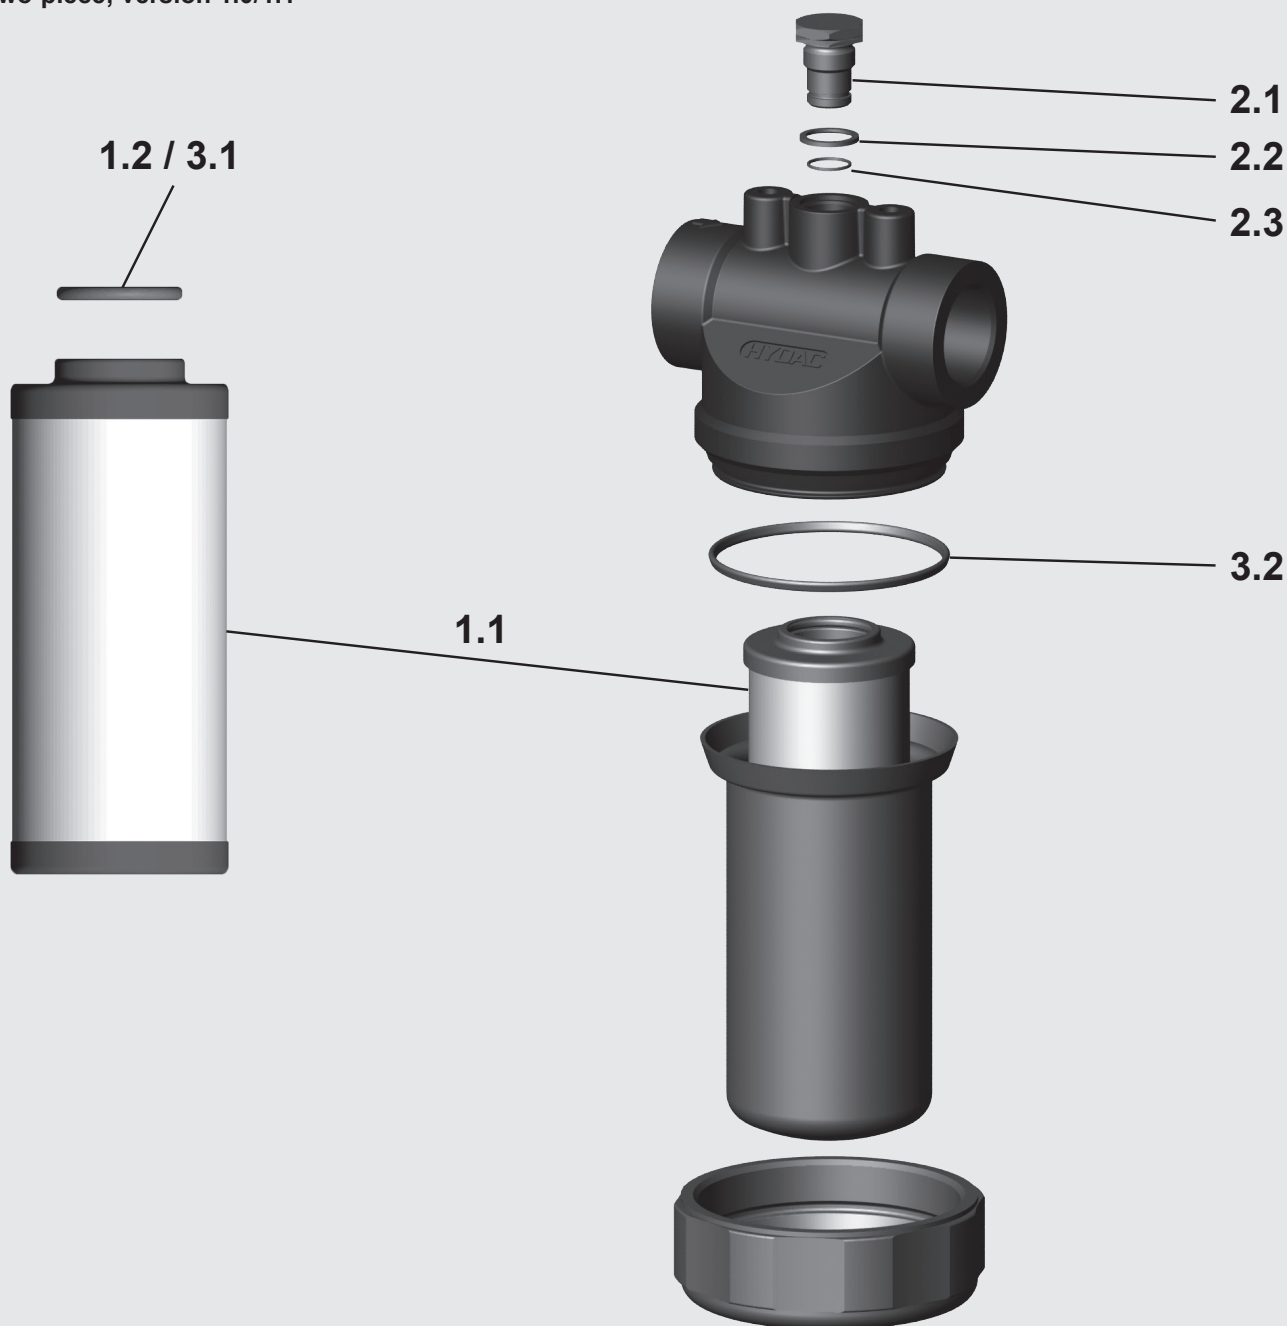


3.4 SPARE PARTS LIST LPF 160 - 280; TWO-PIECE VERSION: 1.0 / 1.1

Item	Con- tains	Designation	160	240	280
1.		Filter element	See Point 4. Replacement elements		
	1.1	Filter element	0160 D...	0240 D...	0280 D...
	1.2	O-ring	34 x 3		
2.		Clogging indicator or indicator plug	See Point 5. Replacement clogging indicator		
	2.1	Indicator plug VD 0 A.1 VD 0 A.1 /-V	00305932 00305931		
	2.2	Profile seal ring	VD...		
	2.3	O-ring	15 x 1.5		
3.		Seal kit LPF 1.0 Seal kit LPF 1.0 /-V	1274641 1273185		
	3.1	O-ring (element)	34 x 3		
	3.2	O-ring (bowl)	85.32 x 3.53		

3.5 SPARE PARTS DRAWING

LPF 160 - 280

One-piece; version 1.2

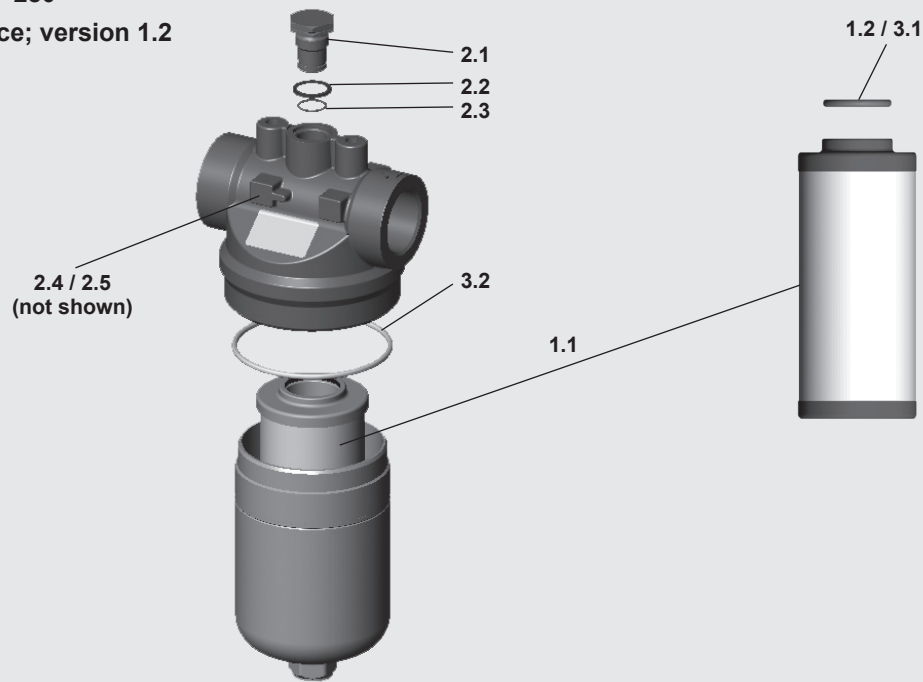

3.6 SPARE PARTS LIST LPF 160 - 280; ONE-PIECE VERSION: 1.2

Item	Con- tains	Designation	160	240	260	280
1.		Filter element	See Point 4. Replacement elements			
	1.1	Filter element	0160 D...	0240 D...	0260 D...	0280 D...
	1.2	O-ring	34 x 3			
2.		Clogging indicator or indicator plug	See Point 5. Replacement clogging indicator			
	2.1	Indicator plug VD 0 A.1 VD 0 A.1 /-V	00305932 00305931			
	2.2	Profile seal ring	VD...			
	2.3	O-ring	15 x 1.5			
	2.4	Clogging indicator type VL	See Point 5. Replacement clogging indicator			
	2.5	O-ring	3.68 x 1.78			
3.		Seal kit LPF 1.2 Seal kit LPF 1.2 /-V	01298496 01298497			
	3.1	O-ring (element)	34 x 3			
	3.2	O-ring (bowl)	91.67 x 3.53			

4. REPLACEMENT ELEMENT

	0160	D	010	ON	/-V
Size	0035, 0055, 0160, 0240, 0260, 0280				
Type	D				
Filtration rating	ON 001, 003, 005, 010, 015, 020 BH4HC: 003, 005, 010, 020 W/HC: 025, 050, 100, 200 (only LPF 160, 240, 260, 280)				
Filter material	ON, BH4HC, W/HC				
Supplementary details	V, W (for description, see "LPF" brochure)				

5. REPLACEMENT CLOGGING INDICATOR

	VM	5	D	X	/-L24
Type of indicator	VM differential pressure indicator up to 210 bar operating pressure VL differential pressure indicator up to 50 bar operating pressure for indicator type "BF"				
Pressure setting	5 standard 5 bar, others on request (2 standard 2 bar for "BF" indicator)				
Type of clogging indicator	A with steel blanking plug in indicator port B visual BF visual, mobile (only LPF 160, 240, 260, 280) C electrical D visual and electrical				
Modification number	X the latest version is always supplied				
Supplementary details	L..., LED, V, W (for description, see "Clogging Indicators" brochure)				

6. MAINTENANCE INSTRUCTIONS

6.1 USER INSTRUCTIONS FOR FILTERS



This pressure equipment must only be put into operation in conjunction with a machine or system.



The pressure equipment must only be used as stipulated in the operating instructions of the machine or system.



This pressure equipment must only be operated using hydraulic or lubricating fluid.



The user must take appropriate action (e.g. venting) to prevent the formation of air pockets.



Repairs, maintenance work and commissioning must only be carried out by trained personnel.

Allow the pressure equipment to cool before handling.

The stipulations of the operating instructions of the machine or the system must be followed.



Caution: pressure equipment! Before any work is carried out on the pressure equipment, ensure the pressure chamber concerned (filter housing) is depressurised.



On no account must any modifications (welding, drilling, opening by force, etc.) be carried out on the pressure equipment.



It is the responsibility of the operator to comply with the water regulations of the country concerned.



Statutory accident prevention regulations, safety regulations and safety data sheets for fluids must be observed.



Filter housings must be earthed.



When working on, or in the vicinity of, hydraulic systems, naked flames, spark generation and smoking are forbidden.



Hydraulic oils and water-polluting fluids must not be allowed to enter the soil or watercourses or sewer systems. Please ensure safe and environmentally friendly disposal of hydraulic oils. The relevant regulations in the country concerned with regard to ground water pollution, used oil and waste must be complied with.



Whenever work is carried out on the filter, be prepared for hot oil to escape which can cause injury or scalding as a result of its high pressure or temperature.



When using electrical clogging indicators, the electrical power supply to the system must be switched off before removing the clogging indicator connector.

Customer Information in respect of Machinery Directive 2006/42/EC

Hydraulic filters are fluid power parts/ components and are therefore excluded from the scope of the Machinery Directive. They do not bear the CE mark. Before using these components, ensure compliance with the specifications provided by HYDAC Filtertechnik GmbH in this documentation.

The specifications also contain information on the relevant essential health and safety requirements (based on Machinery Directive 2006/42/EC) that are to be applied by the user.

We hereby declare that the filters are intended to be incorporated into machinery within the terms of the Machinery Directive 2006/42/EC. It is prohibited to put the filters into service until the machinery as a whole is in conformity with the provisions of the Machinery Directive. Furthermore, our Terms of Sale and Delivery are available on our website (www.hydac.com).

SERVICE ADDRESSES

HYDAC Service GmbH
Postfach 1251
66273 Sulzbach / Saar, Germany
Factory address:
Werk 13
Friedrichsthaler Straße 15
66540 Neunkirchen / Heinitz, Germany
ServiCenter:
Tel.: +49 (0) 6897 / 509-9083
Fax: +49 (0) 6897 / 509-9881
Customer service:
Tel.: +49 (0) 6897 / 509-412
Fax: +49 (0) 6897 / 509-828

6.2 MAINTENANCE, GENERAL

This section describes maintenance work which must be carried out periodically. The operational safety and life expectancy of the filter, and whether it is ready for use, depend to a large extent on regular and careful maintenance.

6.3 MAINTENANCE MEASURES

- Spare parts must fulfil the technical requirements specified by the manufacturer.
This is always guaranteed for original HYDAC spare parts.
- Keep tools, working area and equipment clean.
- After disassembling the filter, clean all parts, check for damage or wear and replace parts if necessary.
- When changing a filter element, a high level of cleanliness must be observed!

6.4 INTERVAL BETWEEN ELEMENT CHANGES

In principle we recommend that the filter element is changed after 1 year of operation at the latest.

We recommend fitting the filter with a clogging indicator (visual and/or electrical or electronic) to monitor the filter element.

If the clogging indicator responds, it is necessary to change or clean the filter element without delay (only W and V elements can be cleaned).

When no clogging indicator has been fitted, we recommend changing the elements at specific intervals (the frequency of changing the filter elements depends on the filter design and the conditions under which the filter is operated). When filter elements are subject to high dynamic loading it may prove necessary to change them more frequently. The same applies when the hydraulic system is commissioned, repaired or when the oil is changed.

The standard clogging indicators only respond when fluid is flowing through the filter. With electrical indicators the signal can also be converted into a continuous display on the control panel. In this case the continuous display must be switched off during a cold start or after changing the element.

If the clogging indicator responds during a cold start only, it is possible that the element does not yet need to be changed.

NOTE

The information in this brochure relates to the operating conditions and applications described. For applications or operating conditions not described, please contact the relevant technical department. Subject to technical modifications.